


Instructions For Attaching The Turret To The Carrier

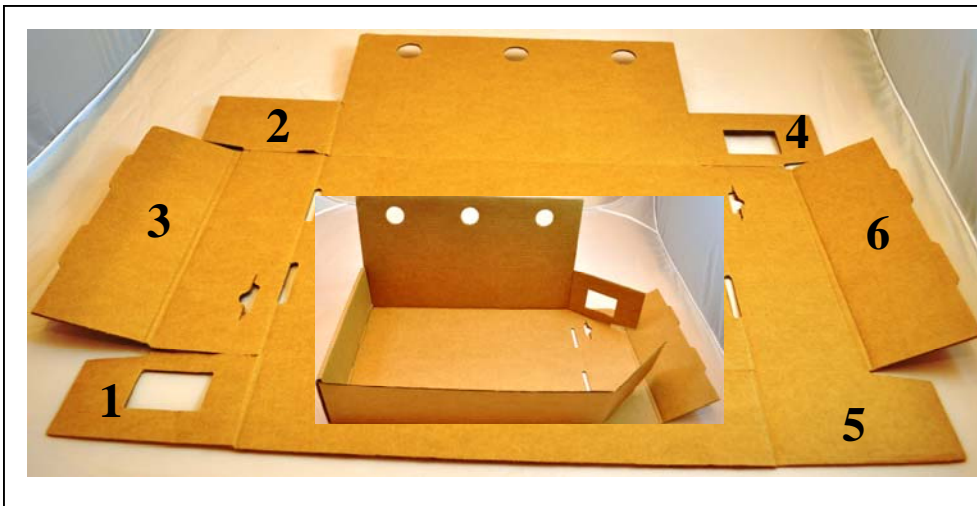

Fold tabs 1 and 2 up and in (so that the back of the Turret comes up, as pictured). Then fold 3 over the top of 1 & 2 and lock into slots. Repeat on the other side.

Fold your Carrier to look like this.



Insert the tabs from the side of the Carrier into the Turret. If the tabs on the side of the Carrier do not match with the Turret you have folded your Turret inside out.



To use the Carrier with the Turret inside place unit face up into the carrier (as pictured) to ensure that ventilation holes are open.