

Humaniac™ Cage Net

About...




Thank you for purchasing a Humaniac™ Cage Net, a versatile net that will reach into tight spaces making for successful humane animal captures every time. The soft deep net is made from fine meshed nylon netting which reduces the risk of tangling. Featuring a full length zipper in the bottom of the net makes for easy transfer/release of the animal. For use on animals weighing less than 30lbs (13kgs). Replacement nets and cables are available for purchase.

Caring for your net...

Do not use bleach or any solution that contains sodium hypochlorite as this will damage the net. We recommend disinfecting your net with a multi-purpose germicidal detergent and deodorizer such as Triple Two or Kennelsol. If your net becomes a little hard and stiff from cleaning you can dip it into a bucket of fabric softener. Do not store in direct sunlight and ensure that the net is dry before storage.



Safety...

- Animals can be unpredictable when they feel threatened; to ensure a successful capture we recommend that you are fully familiar with the workings and capabilities of the net before utilizing in the field. Animal Care Equipment & Services LLC (ACES) assumes no responsibility or liability for any damage(s) and/or accidents resulting from the use of this net
- Keep clear of all overhead wires

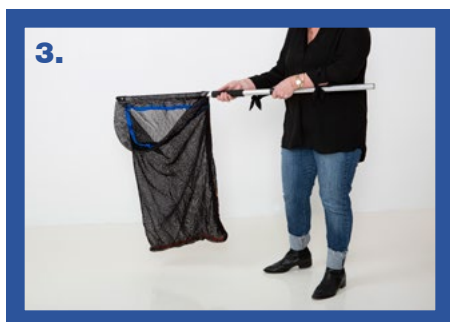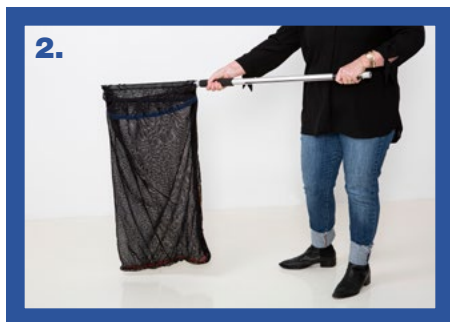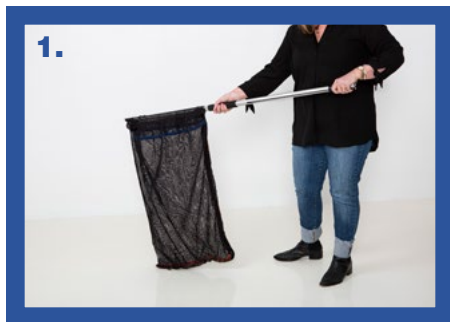

How to...

1. Remove the net from the cover and unravel so that the net is hanging straight down to the ground
2. Place one hand on the black plastic grip (end of the pole) and the other hand on the black grip (closest to the net)
3. Slide the black plastic grip towards the other hand grip and this will open the net forming a "D"
4. Place open net over animal
5. Once you have captured the animal – secure the animal in the net by sliding the black plastic grip back to the start of the pole
6. Roll the net to fully secure the animal and this will also reduce the stress off the hoop wire

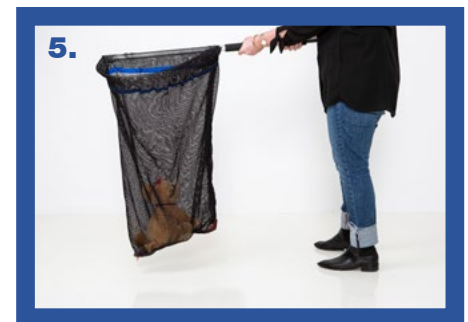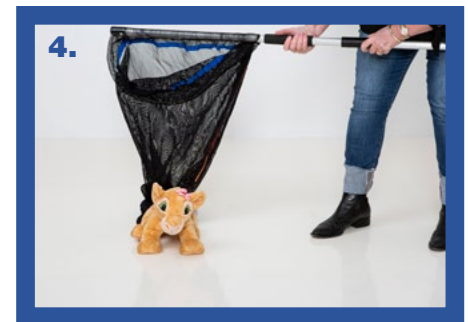

How to replace your net...

- Take note when you are removing all the fittings as you will need these for reassembly
- Remove the old net by cutting the zip tie (see figure A)
- Remove the bolt from the plastic guard at the top of the pole and remove the guard (see figure B)
- Slide old net off
- Thread open ends of the net through the cable and pole simultaneously. Ensure that you have slack on the cable side so that the net can be opened. There should be no slack on the pole side
- Replace all fittings loosely back to their original places – do not tighten yet
- Test the net to ensure that it is operating properly and make any needed adjustments
- If the net is operating correctly, now tighten the bolt that is through the plastic guard and pull zip tie tight



How to replace your cable...

- Take note when you are removing all the fittings as you will need these for reassembly
- Remove old netting (see instructions above)
- Remove the old cable by undoing the two screws that hold the black plastic hand grip in place. (see figure C)
- Slide out the piston and remove the screw and washer on the end that is holding the cable
- Cut the cable and then pull the cable out
- Insert the new cable through the slit in the pole and push all the way up so that it sticks out of the pole by at least 4"
- Attach the piston by sliding it through the excess cable at the handle end of the pole and reattaching
- Bend cable 90 degrees 1/2" from the end using a vise grip. Ensure that the cable fits within the diameter of the piston otherwise it will not move freely within the pole
- Slide cable into the groove at the bottom of the piston and fasten
- Secure black plastic hand grip on the pole
- Replace net

